

Installation Guide

The maibec Woven Corner

maibec, leading manufacturer of Eastern white cedar shingles, introduces its new pre-assembled inside and outside corners for its classic shingle line. These corners provide a professional finish, eliminating the need for touch-ups, while increasing productivity on the jobsite.

The Outside Corner

- Two shingles bound by re-inforced vinyl tape per pre-assembled corner:
 - One shingle is notched in the upper corner.
THIS IS THE OVERLAP SHINGLE.
 - Reversible.
- Must stagger shingle widths.

The Inside Corner

- Two shingles bound by re-inforced vinyl tape per pre-assembled corner.
- This corner **DOES NOT** have a notch, as both sides can overlap.
- Must stagger shingle widths.

24 outside or inside corners per box, 10 linear feet/box at 5" exposure*:


- **1 starter corner per box, identified with a V cut in the tapered edge and a green tape at the base.**

Equal amount of narrow shingle corners (3 1/2-5") and wide shingle corners (6-8") in every box.

For exterior use only.

* For use at exposures between 4 3/4" and 5 1/2".

The Outside Corner

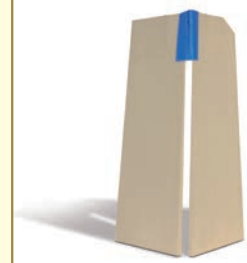

The Inside Corner




Storage

- Store the shingle siding in a dry and ventilated area.
- Leave shingles boxes on pallet. Do not store the material in direct contact with the ground or a cement floor.
- Always cover the uninstalled material after a day's work.


The Outside Corner – Installation / The First Row

- Use starter corner over undercourse shingles.
- Set corner on straight edge (ex: furring strip).
- Install NON notched shingle first, make sure butt is always flush.
- Then install notched shingle, overlapping the first shingle.
- Insert stainless steel finish nail in the bottom of the corner to solidify.


TIP: Place the overlap shingle slightly beyond the corner, then butt the opposite side shingle into it to properly fix it in place. Fasten it, then place the overlap shingle into its proper position for fastening.

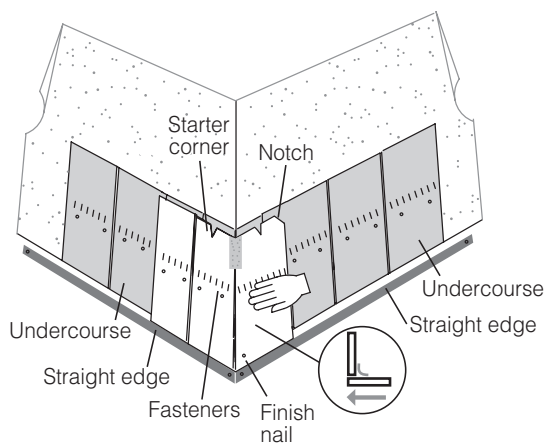

Step 1

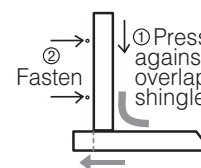

Step 2

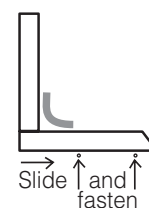


Important: Compliance with maibec's installation, storage and maintenance requirements, and with building codes applicable in your region is mandatory. Problems caused by failure to comply with these requirements and codes may not be covered under applicable warranties.

The Outside Corner – Installation / The Subsequent Rows


- Use appropriate size pre-assembled corner to stagger shingle edges from first row.
- Repeat steps from first row.

IMPORTANT: The corner is reversible. Always install the notched shingle as the overlap of the corner.

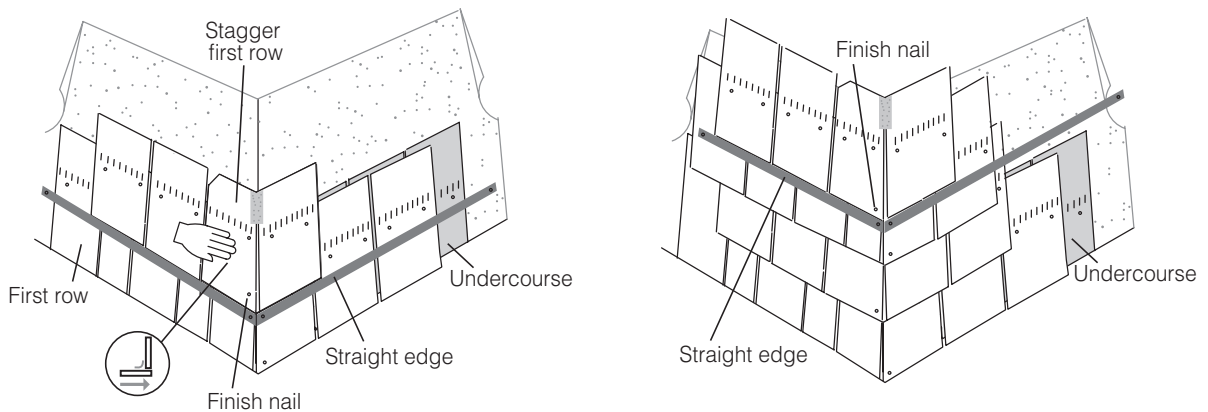

The Inside Corner – Installation

- Install starter corner over undercourse shingles.
- Overlap shingle as desired, fasten.
- On subsequent rows, select corner to stagger corner edges from previous row.
- Overlap shingle opposite of the previous row, fasten.

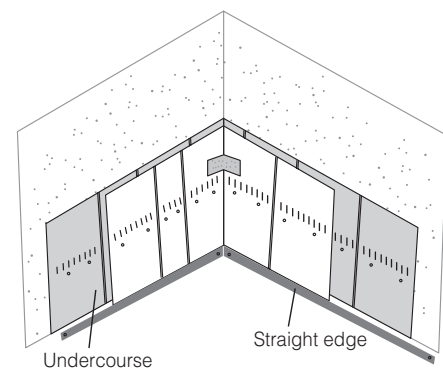

Important: Compliance with maibec's installation, storage and maintenance requirements, and with building codes applicable in your region is mandatory. Problems caused by failure to comply with these requirements and codes may not be covered under applicable warranties.